



Failure to follow these instructions could result in fire which could cause property damage, personal injury or death.

POSITION YOUR GRILL IN A SAFE AND LEVEL SPOT

NEVER operate your grill indoors or in any enclosed area.

NEVER operate this appliance within 5ft (1.5m) of any structure or combustible material.

NEVER operate this appliance within 25ft (7.5m) of any flammable liquid or gas.

Assembly should be carried out by a competent person and should **ALWAYS** be done with the help of another person.

DO NOT attempt to lift your grill alone.

ALWAYS EXERCISE CAUTION WHEN YOUR GRILL IS HOT

NEVER leave your grill unattended when hot.

KEEP young children and pets away from your grill.

DO NOT touch your grill to check if it is hot, ALL parts will become VERY HOT during use.

ALWAYS use heat resistant gloves when operating your grill.

USE EXTREME CAUTION when handling, or removing hot food or cooking surfaces.

DO NOT wear long sleeve or loose items of clothing during cooking.

BE CAUTIOUS heated liquids remain at scalding temperatures long after cooking.

DO NOT move your grill during use.

DO NOT use gasoline, kerosene, or any other highly volatile fluids to light or relight your grill.

DO NOT use wet wood, softwood or wood that has been chemically treated.

DO NOT overfill the firebox or cooking area of your grill.

DO NOT use your grill as a heat source or firepit.

The use of alcohol, prescription or non-prescription drugs may impair the consumers ability to assemble or operate the device safely.

ALWAYS ensure the grill is completely cool before attempting any cleaning or maintenance.

Replacement parts should **ONLY** be purchased directly from Flamery.